


Contact Surface Sensor



Versatile & Reliable Surface Sensing

A critical aspect of Precision Dispensing, Contact Surface Sensing is the most versatile & reliable method of surface sensing

Locating the substrate surface is a very critical aspect of precision dispensing. For some applications the needle must be positioned 0.0010" to 0.0015" (25 μ m to 38 μ m) above the surface. Contact surface sensing is the most versatile and reliable method of surface sensing.

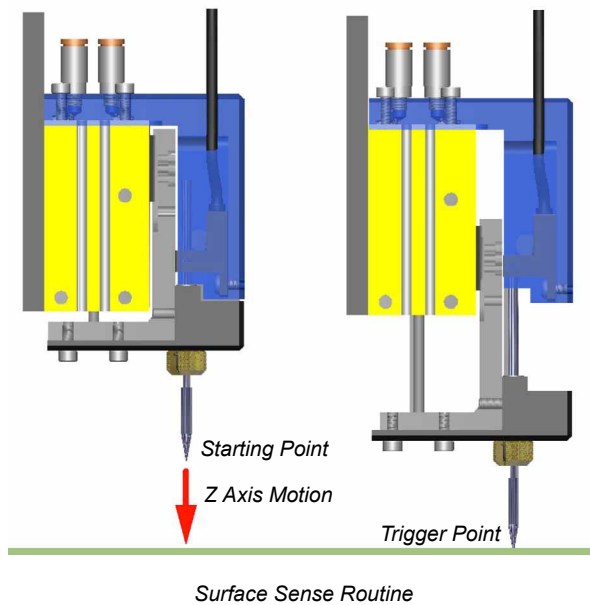

- **Contact surface sensor** is not subject to surface textures or colors like a laser. A laser's repeatability is reliant on the consistency of a reflected beam; surface textures and colors affect that reflectivity, altering the laser feedback from substrate type to substrate type.
- **Probe tip** has a substrate contact area of 0.015" (380 μ m) in diameter. The tip may be customized for specific applications, either with a larger or smaller diameter probe.
- **Cycle time** for a surface sense is approximately one (1) second. The cycle time is the same for all substrates.
- **Design** incorporates a linear slide for smooth sensor tip extension.
- **Sensor** is isolated from moving parts
- **Continuous testing** has yielded repeatability of ± 0.0003 " (± 7 μ m) on all surfaces.

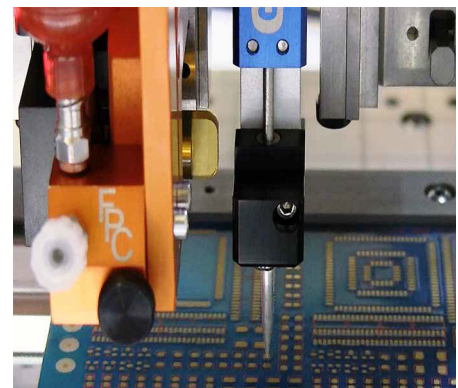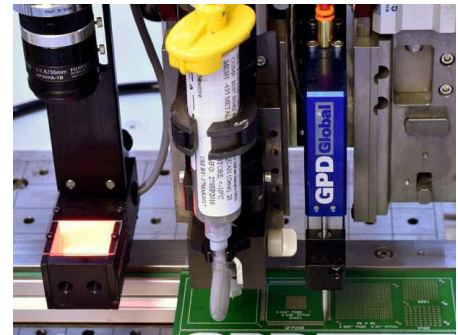

Rev Apr 2018

GPD Global
Precision Dispensing Systems

www.gpd-global.com • request@gpd-global.com

Headquarters 611 Hollingsworth Street, Grand Junction, CO 81505 USA • T: +1.970.245.0408 • F: +1.970.245.9674
GPD Global (Asia Pacific) Bayan Lepas, Penang, 11900 Malaysia • T: +60.12.555.0909